

# SERVICE



# BULLETIN

**SUBJECT: Inner Booms**

**MODELS: ALL ET\*\*NF AND EST46NF MACHINES**

**SERVICE BULLETIN REF. 061101**

**DATE: January 2007 (re-issued)**

In a small number of cases it has been found that the inner boom on ET machines that have been subjected to excessive stresses, due to overloading or impact, may show signs of stress cracking in the area of the hose and cable entry hole in the underside of the boom. This area of the boom should always be carefully examined during a thorough examination to ensure no signs of stress cracking are present. In the event that stress cracks are present then the inner boom must be replaced as it is not possible to carry out any welding repairs on this boom. In the event of any uncertainty about stress marks in this area please contact Versalift Service for advice.



This bulletin is for technical information purposes only and does not constitute authority for mandatory replacement of parts or warranty claim submission.

*If you have any questions, or if further information is required, please contact the Versalift Technical Help Line on 01536 721010*

**Versalift Distributors (UK) Ltd 1 Altendiez Way Latimer Park Burton Latimer Northants. NN15 5YZ  
Tel. 01536 721010 Fax 01536 721110 Email: admin@versalift.co.uk**