



SUBJECT: FWD TRANSIT PUMP / BRAKE LINE LOCATION

SERVICE MEMO. 14-01-23

DATE: JANUARY 2014

We have had one reported incident that the hydraulic pump fitted to the rear of the engine can come into contact with one of the steel brake lines even though the pump is fitted to the exact same position that Ford fit the air conditioning pump.

We are therefore contacting all our customers who have purchased the Front Wheel Drive Transits and asking them to check the proximity of the steel brake hose to the rear of the pump drive pulley.


We have devised a procedure for relocating and securing the brake line to remove this risk.

Picture 1



Steel hose
Needs to be
approx
30mm away
from pulley

Picture 2

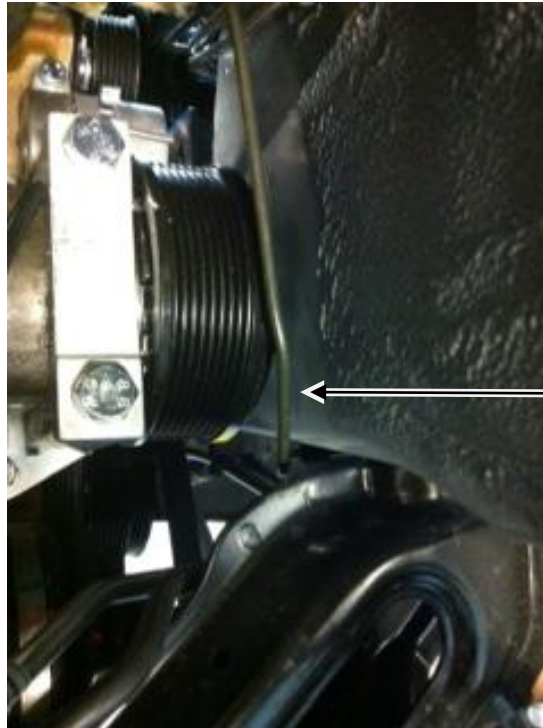

Hose needs pulling away from pulley.

Proposed modification

1. Remove plastic clip as shown in figure below, drill hole to 7mm and fit a 5mm nut insert.



Remove plastic clip

2. Push pipe to rear of the vehicle away from pulley and fit "P Clip"



Fit "P Clip"

3. Relocate rubber grommet from wheel side of chassis to engine side.



Fit
Grommet

If you have any questions, or if further information is required, please contact the Versalift Technical Help Line on 01536 721010

Versalift Distributors (UK) Ltd 1 Altendiez Way Latimer Park Burton Latimer Northants. NN15 5YZ
Tel. 01536 721010 Fax 01536 721110 Email: admin@versalift.co.uk

IMPORTANT IMPORTANT IMPORTANT IMPORTANT IMPORTANT